



# Installation Guide

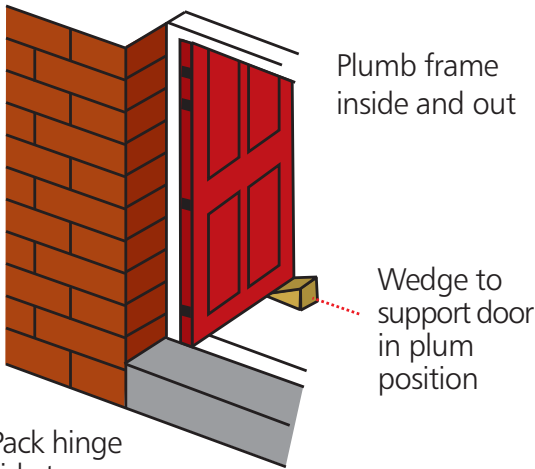

Plumb frame inside and out


Wedge to support door in plum position

Pack hinge side to ensure leveling of frame to lock side

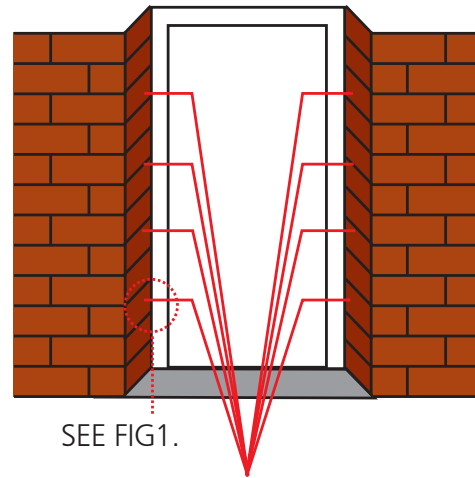

SEE FIG1.

Drill and fix frame plumb and central of brickwork using 100mm/120mm concrete screw and horse shoe packers

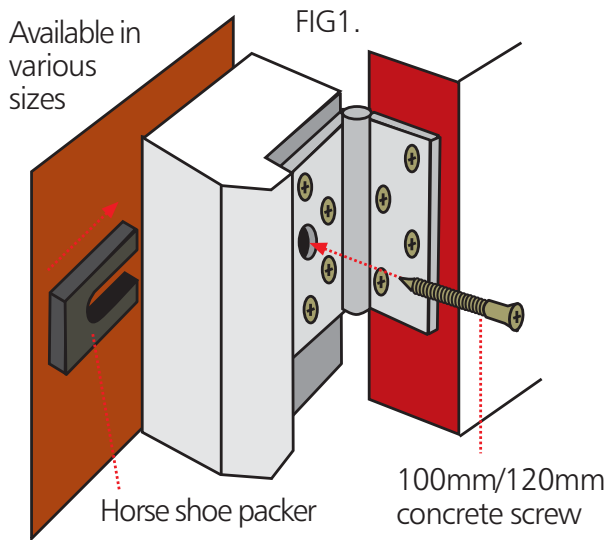


Available in various sizes

FIG1.

Horse shoe packer

100mm/120mm concrete screw

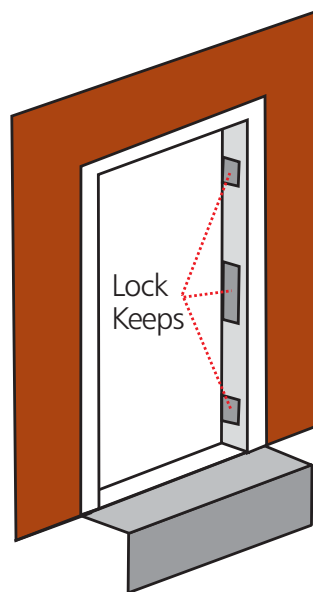


To fix lock side, put frame parallel to step, fix the bottom with fisher fixings and horse shoe packers.

To fix top put frame in twist and fix top. Door when closed should touch frame at top and bottom at the same time.

Push middle of frame 2mm to 3mm away from door and fix to give frame a small bend

Keeps can be adjusted and fixed in correct position with extra screws

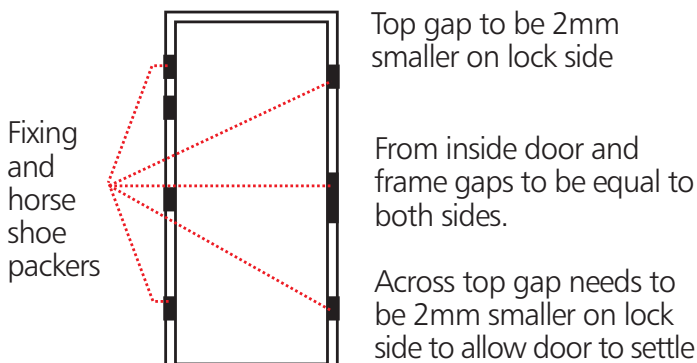

Top gap to be 2mm smaller on lock side

From inside door and frame gaps to be equal to both sides.

Across top gap needs to be 2mm smaller on lock side to allow door to settle

Fixing and horse shoe packers

